


CHC2117

ASSEMBLY & INSTALLATION GUIDE

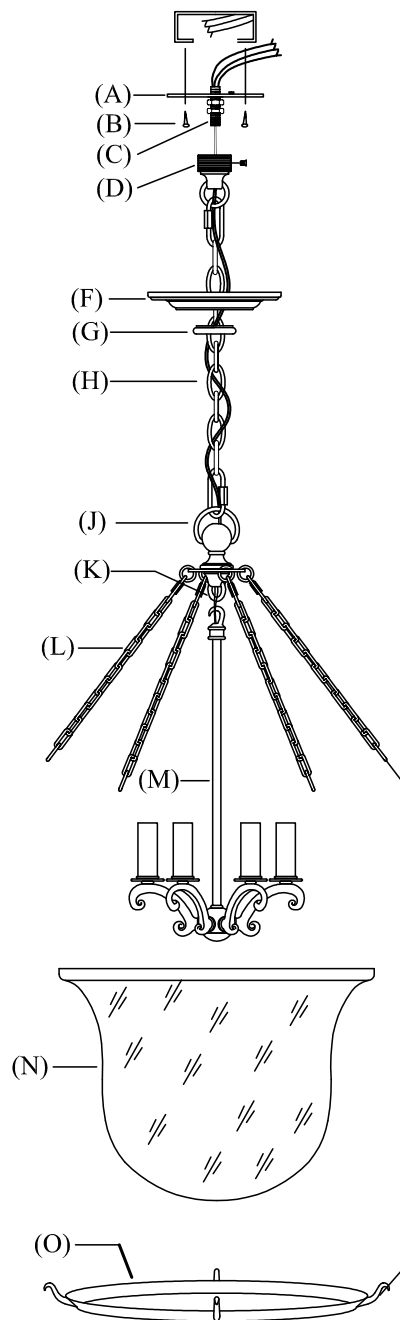

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Attach one end link of chain (H) to top loop (J) on lantern and another end link of chain (H) to chain mounting loop (D). Hook the candelabra assembly (M) to the loop (K) and feed the wire through chain, mounting loop (D) and nipple.
2. Unscrew canopy ring (G) and slide canopy ring (G) and canopy (F) on chain.
3. Attach mounting strap (A) to ceiling outlet box using mounting screw provided.
4. Insert threaded nipple (C) in mounting strap (A). Using pliers, thread one of hex nut to nipple to secure.
5. Screw chain mounting loop (D) with fixture onto nipple.
6. Attach the fixture grounding wire (silver or brass in color) and house grounding wire (usually green or copper) to the mounting strap with the green grounding screw.
7. Connect the neutral wire from the fixture (ridges molded wire) to the neutral wire from the junction box (usually white). Fasten together with a plastic wire connector and wrap the connection with electrical tape. Be sure no wire strands are exposed.
8. Connect the hot wire from the fixture (smooth wire) to the hot wire connector and wrap the connection with electrical tape. Be sure that no wire strands are exposed.
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
9. Tuck wire connections neatly into ceiling outlet box.
10. Slip canopy (F) to ceiling and secure with threaded canopy ring (G).
11. Insert light bulbs into the sockets.
12. Attach metal ring (O) to glass shade (L), hook the ring to three end links of side chains (L).